INSTALLATION INSTRUCTIONS FOR THE GM ORIGINAL EQUIPMENT LOOK CONTROL SWITCH

A. Removal of Turn Signal Lever

1). Grip the original turn signal lever near it's base at the steering column and pull straight from the socket, and discard the lever.

B. Installation of **Original Equipment Look Control Switch**

1). Attach a small diameter insulated wire to terminal end of harness with electrical tape.

2). Insert insulated wire into steering column. Feed insulated wire through column until the harness is visible at the bottom of column.

3). Remove tape and small diameter insulated wire from harness - Install **4-Pin Connector.** Follow color code markings on connector body as shown in **Figure 2.**

4). Align and install new control switch into turn signal lever mount in column as shown in **Figure 1.**

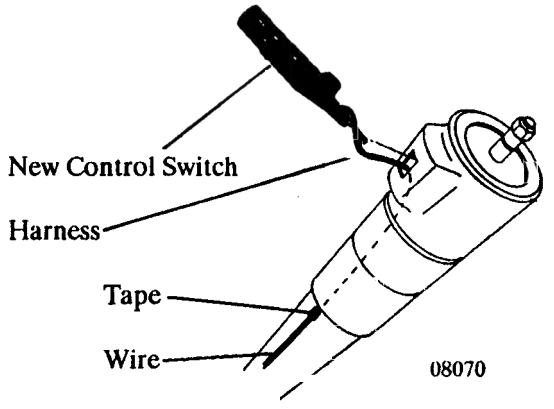

FIGURE 1

Top View of Connector

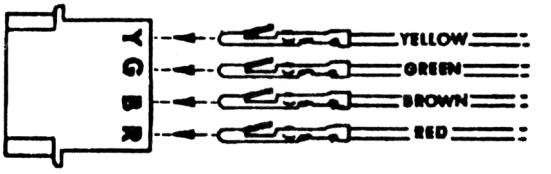

FIGURE 2

ROSTRA PRECISION CONTROLS INC.

ROSTRA PRECISION CONTROLS, INC 1992

ALL RIGHTS RESERVED PRINTED IN THE USA

Form #2299
REV. A